
 


80 Series Legend Sheets

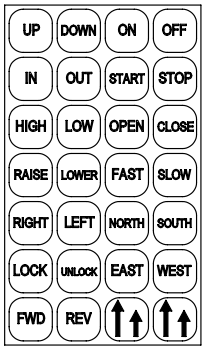


Button Legend - 34326




Mushroom Switch Legend - 35299


Legend/Sticker	Usage	Part No.
Button Legend	For push button marking. One sheet is automatically included with each pre-assembled pendant	34326
Mushroom Switch Legend	For mushroom switches	35299
Warning Sticker	n/a	35373
Vertical Legend	For case marking (Contact factory for legends sheets not listed.)	34327
Selector Switch Sheet #1	For case marking of selector switches	35300
Selector Switch Sheet #2	For case marking of selector switches	37228

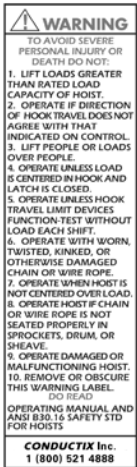


Warning Sticker - 35373

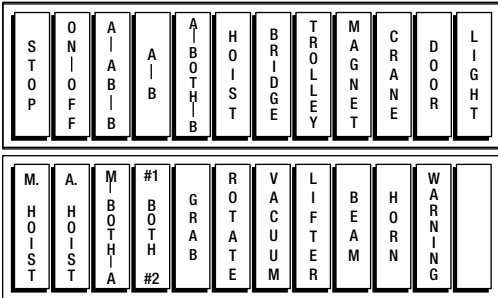

Vertical Legend - 34327

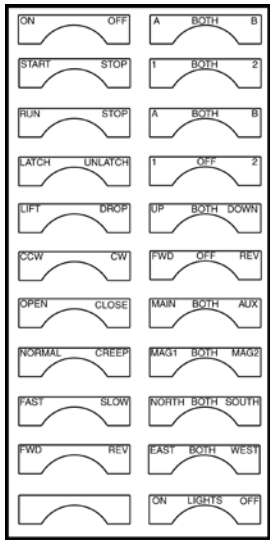

Selector Switch Legend #1 - 35300

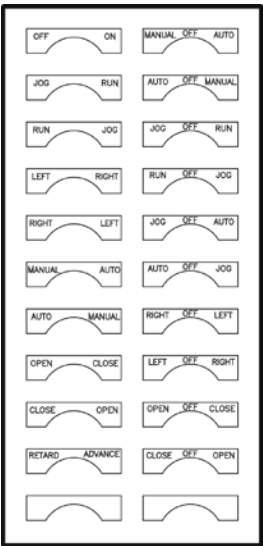

Selector Switch Legend #2 - 37228